



Forward this manual to all operators.  
Failure to operate this equipment as  
directed may cause injury and/or  
property damage.

## INSTALLATION AND OPERATION MANUAL

### HIGH STANDS



MODELS  
RJS-1T  
RJS-1TF  
RJS-2TH

### SHIPPING DAMAGE CLAIMS

When this equipment is shipped, title passes to the purchaser upon receipt from the carrier. Consequently, claims for the material damaged in shipment must be made by the purchaser against the transportation company at the time the shipment is received.

### BE SAFE

Your new ranger high stands are designed and built with safety in mind. However, your overall safety can be increased by proper training and thoughtful operation on the part of the operator. DO NOT operate or repair this equipment without reading this manual and the important safety instructions shown inside.

### **Bend - Pak Inc.**

1645 Lemonwood Drive  
Santa Paula, CA 93060, U.S.A  
Tel: 805 933 9970 - Fax: 805 933 9160

**“The Benchmark Of Quality”**

## UPON DELIVERY

1. Carefully remove all packaging material.
2. Inspect the equipment and all parts for any signs of concealed shipment or storage damages.
3. Remember to report any shipping damage to the carrier and make a notation on the delivery receipt.

## IMPORTANT SAFETY TIPS

Be sure to read all warning labels and the instruction manual prior to operation of this equipment.

Keep hands and body clear of all pinch points.

Do not overload stands beyond rated capacity. Overloading can cause damage or failure of the jack stands.

Position load on the center of the saddle only. Always use stands on a hard level surface capable of sustaining the load. Use of stands on other than hard level surfaces can result in stand instability and possible loss of load.

These stands are designed to be used to support vehicle exhaust systems and drive shafts underneath an already hoisted vehicle.

Frequently inspect this stand carefully for any damages or missing parts.

Keep the work area clean. All visitors and especially children should strictly be kept away from the work area.

This equipment should be operated by professional personnel only.

## SPECIFICATIONS / FEATURES

MODEL NUMBER	HOLDING CAPACITY	LOWERED HEIGHT	MAXIMUM HEIGHT	BASE DIMENSION	SHIPPING WEIGHT
RJS-1T	1,650 Lbs 748 Kg	54-1/2" 1382 mm	80-1/2" 2045 mm	12" Diameter 305 mm diameter	36 Lbs 16 Kg
RJS-1TF	1,650 Lbs 748 Kg	54-1/2" 1382 mm	80-1/2" 2045 mm	12" Diameter 305 mm diameter	38 Lbs 17 Kg
RJS-2TH	4,000 Lbs 1,814 Kg	55" 1397 mm	87" 2210 mm	24" x 24" 609mm x 609mm	45 Lbs 20 Kg

## ASSEMBLY INSTRUCTIONS

RJS-1